B

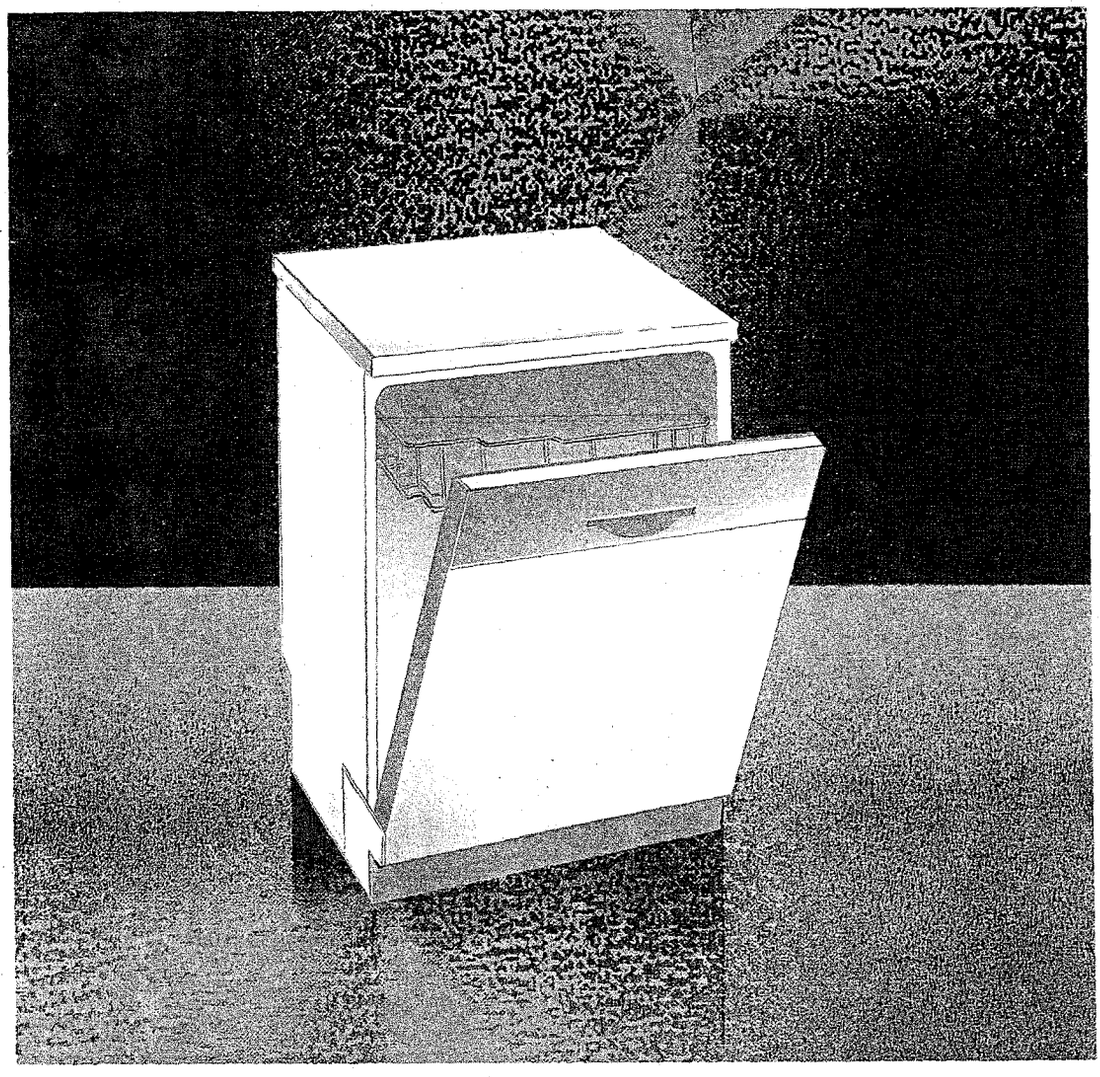

ADP5XXX

TABLE OF CONTENT GB

THE DISHWASHER AND ITS ACCESSORIES	Page 16
THE PANEL	Page 17
BEFORE USING THE DISHWASHER	Page 18
TRANSPORTATION	Page 18
PRECAUTIONS AND GENERAL SUGGESTIONS	Page 19
HOW TO LOAD THE CROCKERY	Page 20
HOW TO FILL THE WATER SOFTENER	Page 21
HOW TO FILL THE RINSE-AID	Page 22
HOW TO FILL THE DETERGENT DISPENSER	Page 22
HOW TO OPERATE THE DISHWASHER	Page 23
HOW TO SELECT THE WASH PROGRAMME	Page 23
TROUBLE-SHOOTING GUIDE	Page 24
HOW TO MAINTAIN THE DISHWASHER	Page 24
AFTER SALE SERVICE	Page 25
CONNECTIONS	Page 25

THE DISHWASHER AND ITS ACCESSORIES

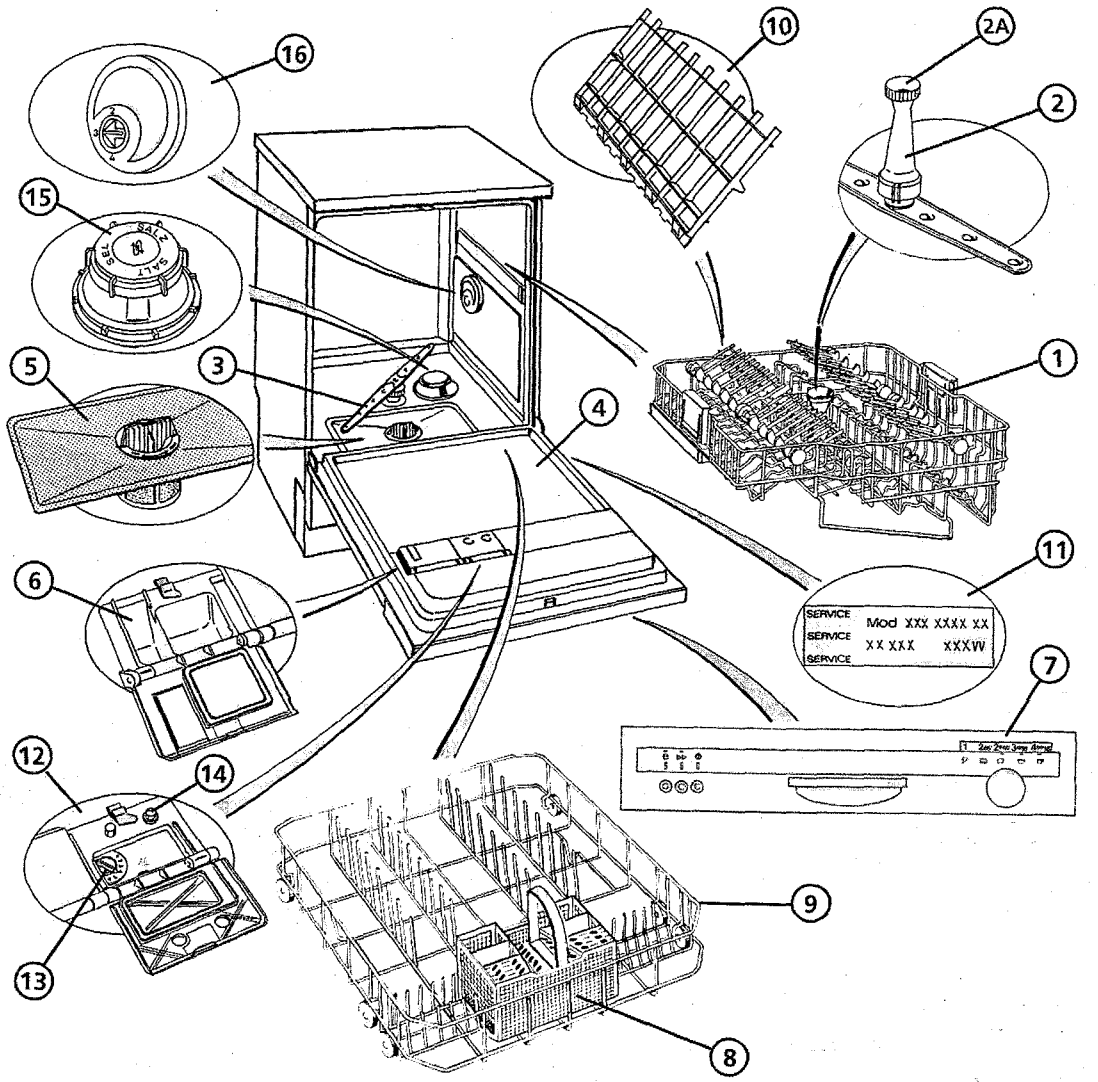

1. Upper rack
2. Upper spray arm (the pressure can be adjusted. For delicate crockery, turn the spray arm to the right - 2 A)
3. Lower spray arm
4. Door
5. Soil filter
6. Detergent dispenser
7. Panel
8. Cutlery basket
9. Lower rack
10. Multifunction holders
11. Service plate
12. Rinse aid dispenser
13. Rinse aid regulator
14. Rinse aid level indicator
15. Regeneration salt container
16. Dosage setting for salt

THE PANEL

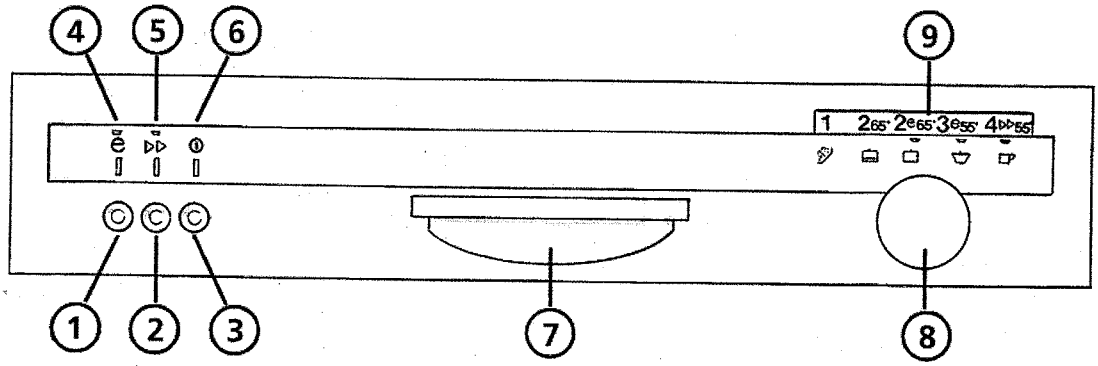

1. **Economy programme button**
2. **Rapid programme button**
3. **On/Off button**
4. **Economy programme indicator light**
5. **Rapid programme indicator light**
6. **On indicator light**
7. **Door handle:**
   - To open the door pull the handle.
   - To close the door push with a slight pressure.
8. **Programme control knob** (turn it clockwise)

   1. Pre-wash programme
   2. Normal programme 65°C
   2 e. Economy programme 65°C
   3 e. Economy programme 55°C
   4 ▷▷. Rapid programme 55°C

9. **Programme description**

BEFORE USING THE DISHWASHER

1. Packaging (plastic bags, polystyrene parts, etc.) must be stored out of the reach of children as they are potentially hazardous.

2. The packaging box is recyclable and is marked with the recycling symbol ♺.

3. The appliance is built with re-usable material. When scrapping follow the local environmental-protecting regulations. Render the dishwasher inoperative. Cut the power-cable off.

4. Check that the dishwasher is not damaged and that the door closes tightly.

5. Only use the dishwasher for domestic use and for its intended purposes.

6. Please ensure that the installation and the electrical connection has been carried out by a qualified technician following the manufacturer's instructions (see the separate instruction booklet) and in compliance with local safety regulations.

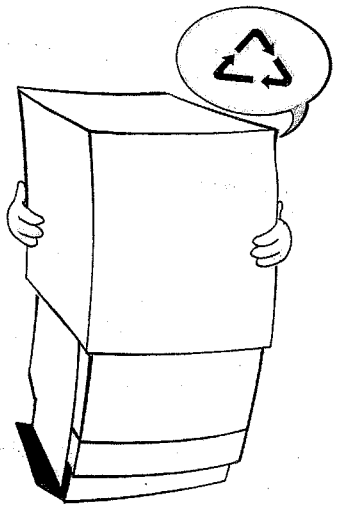

TRANSPORTATION

1. Close the water tap.

2. Disconnect the inlet and drain hoses as well as the electric plug.

3. Drain any residual water.

4. Transport the dishwasher upright.

PRECAUTIONS AND GENERAL SUGGESTIONS

1. Before any cleaning or maintenance operation **disconnect the dishwasher** by switching off the electricity at the mains or by pulling the plug out.
2. Do not leave the appliance switched on unnecessarily.

③. Should any fault be detected, disconnect the appliance from the mains and close the water tap. Then contact our After Sale Service describing the fault and giving the model N° of the appliance and the Service N° as well as your address and phone N°.

④. Do not use the open door as a workbase and do not allow children to stand or sit on it.

5. Store detergents, rinse aid and salt in a cool dry place, out of the reach of children.
6. Only use detergents, rinse aid and regenerating salt specifically recommended for use in domestic dishwashers.
7. Only wash crockery and cooking utensils which are dishwasher safe.

⑧. For best results place all cutlery in the cutlery baskets with the handles downwards. However, to avoid potential injuries, cutlery may also be placed in the basket with the handles upwards.

9. Silver dishes and cutlery must be washed immediately after use to avoid spots and discoloration.
10. The following utensils are unsuitable for washing in a dishwasher:
    - Some aluminum articles (they tend to discolour).
    - Pewter (it becomes dull).
    - Wood boards, cutlery with wood or horn handles and temperature sensitive plastic articles (they may warp, crack or come unglued).
11. The inlet hose and the plastic casing of the water tap connector contain electrical parts (if provided). Therefore do not severe the hose and do not immerse the plastic casing in water. In case of damage to the hose, immediately disconnect the appliance from the mains.

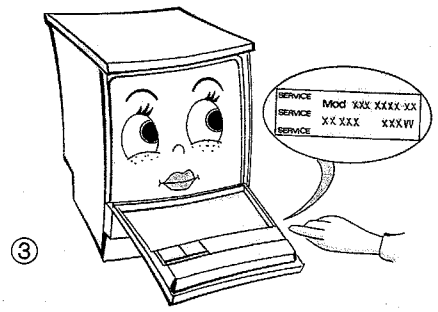

③

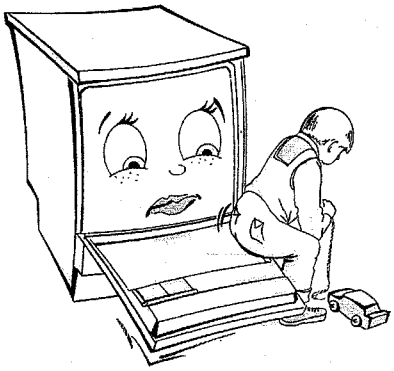
④

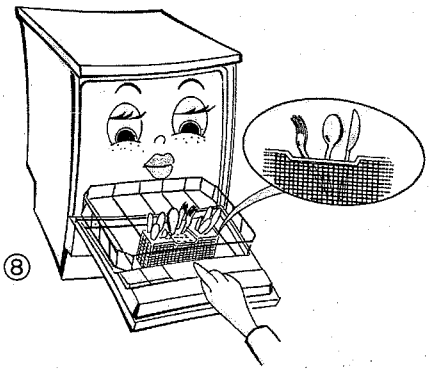
⑧

HOW TO LOAD THE CROCKERY

Capacity: up to 12 Place Settings, including service dishes.

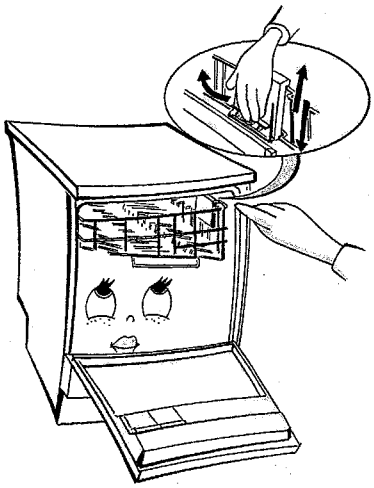

1. Remove any food leftovers from the dishes.
2. Pull the rack out.
3. In the top rack load upside down glasses, cups, bowls, serving crockery, small dishes.
   By pulling the side handles, you can adjust your rack vertically as well as the angle to accommodate high-stem glasses.

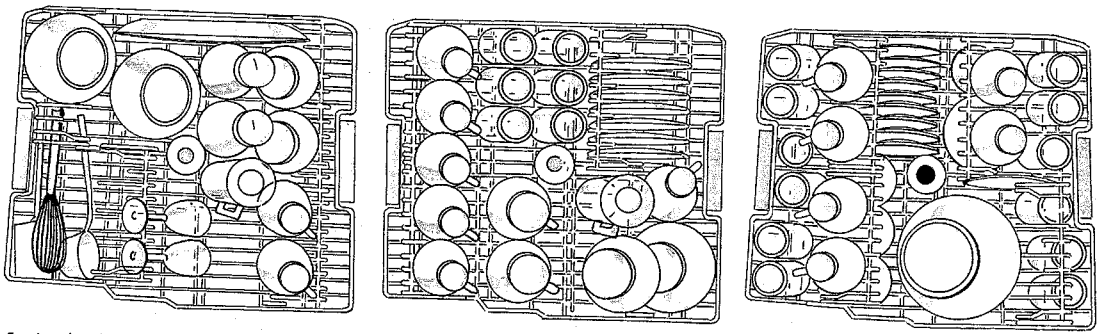

4. In the lower rack load all dishes, including the serving dish, pots and pans and place the cutlery in the proper basket.

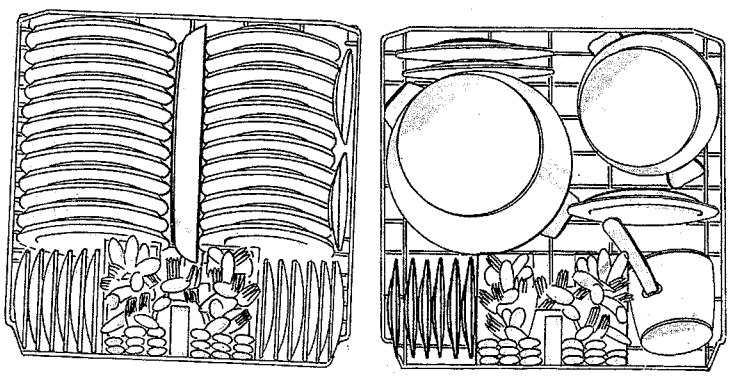

MULTIFUNCTION HOLDERS

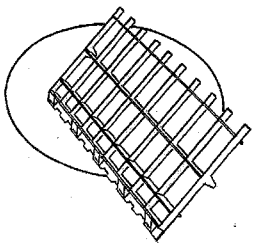

The 4 swivelling holders keep long-stemmed glasses safely.
They can be used to load bowls with the right inclination so that water can easily circulate.

- To remove the holders, place them vertically, gently squeeze the sides and lift up carefully.

HOW TO FILL THE WATER SOFTENER

The water softener must be filled prior to first use. Then check periodically.

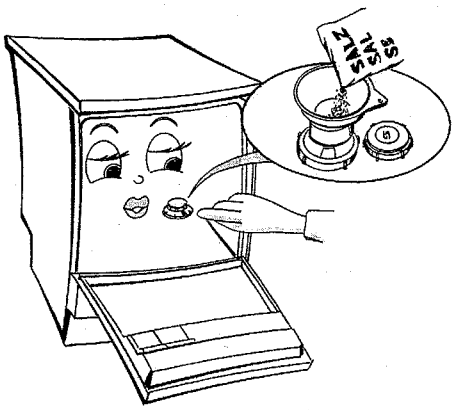

1. Fill in the salt.
   - Remove the lower basket.
   - Unscrew the cover.
   - Put in the funnel.
   - Fill in the salt. Only use regenerating salt for dishwashers (if the dishwasher is new, pour 1 litre of water in the reservoir first).
   - Fill the salt to the edge (max. 2 kg) then stir with the handle of a spoon.
   - Tighten the cover and start a wash programme immediately.
     Failure to operate your dishwasher immediately can cause some corrosion.
     (Using the pre-wash is not enough).
2. Check the water hardness of your home.
   - You can obtain information about the degree of hardness of your water suppy from the local water board or council.
   - For your information, the quality of water has been classified by water hardness range.

	Category of hardness	Caracte-ristics	German degrees °dH	mmol/l	French degrees °dH
2	1	Soft	0-7	0-1,3	0-12
2	2-3	Medium	8-21	1,3-2,5	12-25
3	4	Hard	22-28	2,5-3,8	25-37
4	4	Very hard	> 28	> 3,8	> 37

3. Adjust the knob for the salt dosage, situated on the right hand side inside the dishwasher, using a coin. Set the knob according to the chart above.
   - If the water hardness is 1 you need not use any salt.
   - With phosphate-free detergent, the use of salt is recommended.

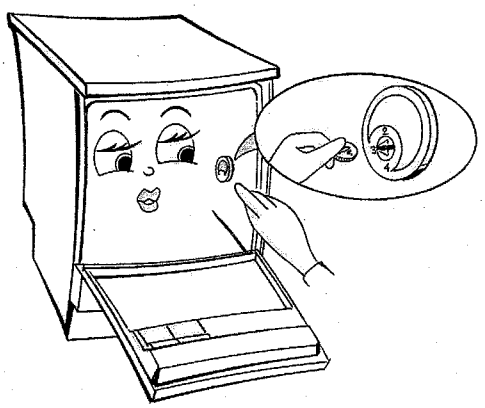

SALT LEVEL INDICATOR

Your dishwasher is equipped with a mechanical indicator. The green floater sinks as the level drops.

- Refill with salt when the floater is no longer clearly visible.

HOW TO FILL THE RINSE-AID

The dispenser must be filled prior to first use.
Then check periodically.

1. Open the rinse-aid cover pressing button Ⓐ.
2. Pour the rinse-aid into the receptacle until the indicator becomes black.
3. Close the rinse-aid cover.
4. Wash away from metal parts any residual rinse-aid which might have overflown.

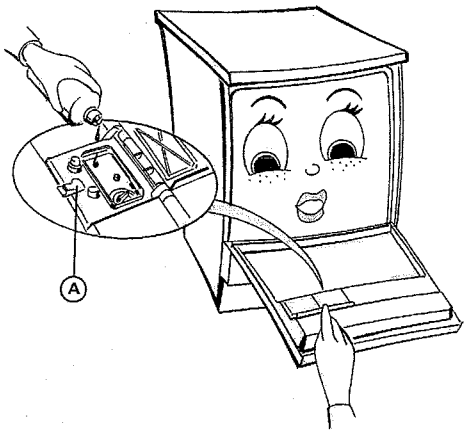

HOW TO ADJUST THE RINSE-AID REGULATOR DOSAGE

- Turn the knob to the desired position.
  For normal use position it to level 3.

RINSE AID INDICATOR

Your dishwasher is equipped with a mechanical indicator.
The black circle becomes smaller as the level drops.

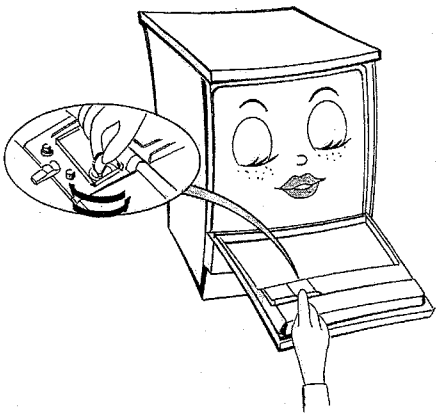

HOW TO FILL THE DETERGENT DISPENSER

The detergent dispenser needs to be filled before any wash programme.

1. Open the detergent cover pressing button Ⓑ.
2. **For programmes with pre-wash,** pour 2/3 of the suggested detergent quantity in the wider compartment and 1/3 in the narrower compartment.

- **For wash programmes,** pour the total detergent quantity into the wider compartment.
  Adjust detergent quantity between **MIN** and **MAX** according to wash load.

3. Close the cover.

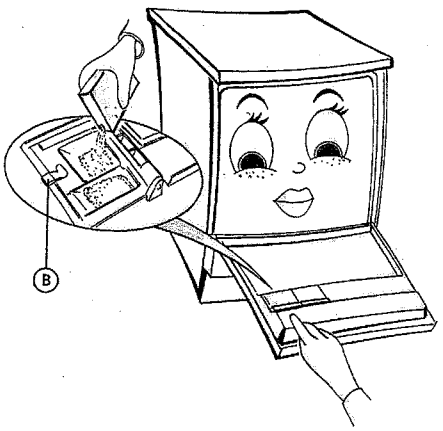

HOW TO OPERATE THE DISHWASHER

1. Load the dishwasher.
2. Fill in the detergent.
3. Tightly close the dishwasher door.
4. Select the appropriate programme, turning the programme control knob clockwise.
5. Press the **On** button (the On indicator light switches on).

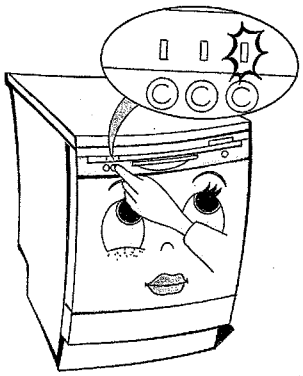

TO MODIFY THE PROGRAMME SELECTED

1. Press the **Off** button (the On indicator light switches off).
2. Select a new programme.
3. Press the **On** button (the On indicator light switches on).

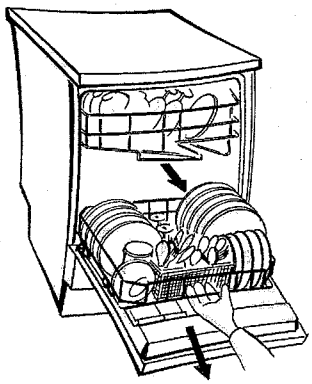

AT THE END OF THE WASH

1. Press the **Off** button (the On indicator light switches off).
2. Leave the dishwasher closed for 15 minutes approx. to allow the crockery to dry.
3. Unload the lower rack first then the top rack.

HOW TO SELECT THE WASH PROGRAMME

- Follow this chart to select the proper wash programme.

Programme	Load	Programme Step					Consumption Data*)		
		Backflush or prewash	Main wash	Intermediate rinse	Final rinse	Drying	Cold water litres	Electricity kWh	Time min.
Pre-wash Programme 1	Part load for prewash when a full programme is not needed	●	–	–	–	–	7,5	<0,1	8
Normal Programme 65°C (IEC 436) 2	Normally soiled crockery with dried on food remains	●	65°C	●	65°C	●	19	1,5	78
Economy Programme with prewash 65°C 2 e	Normally soiled crockery with food remains not dried on	●	65°C	●	65°C	●	19	1,4	73
Economy Programme without prewash 55°C 3 e	Normally soiled crockery with food remains not dried on	–	55°C	●	65°C	●	14	1,3	69
Rapid programme 55°C 4 ▷▷	Lightly to normally soiled crockery with food remains not dried on for 1/2 load	–	55°C	●	55°C	●	14	0,9	43

● Yes
- No

*) Figures vary according to water pressure, amount of soil, size of load, water inlet temperature, electricity fluctuations.

TROUBLE-SHOOTING GUIDE

The appliance does not operate
- Is the plug connected to the socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door properly closed?
- Is the **On** button pressed?
- Is the water tap open?

The crockery is not cleaned properly
- Has the appropriate programme been selected?
- Has enough detergent been put into the dispenser?
- Are the filters clean?
- Are the jets of the spray arms clean?
- Is the cover of the salt container properly fitted?
- Is the crockery loaded correctly?
- Is the spray arm blocked?

The dishes are spotted
- Has the water hardness been checked and adjusted correctly?
- Is there too much salt in the container?
- Does the container need to be replenished?
- Has enough detergent been put into the dispenser?

Spots and glasses on cutlery
- Excessive amount of rinse aid. Adjust the rinse-aid regulator to a lower setting.

Crockery has not dried, calcium stains
- Insufficient amount of rinse-aid. Adjust the rinse-aid on a higher setting.

HOW TO MAINTAIN THE DISHWASHER

- Periodically wipe the door seal with a damp cloth to remove any food leftovers.
- Clean the exterior cabinet with a soft cloth; periodically use an enamel polish. **Do not use abrasives.**

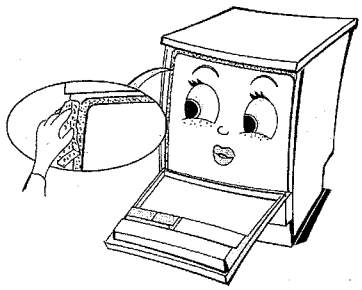

CLEANING THE SOIL FILTER

If required, clean the filter as follows after each wash programme:

1. Remove the lower rack.
2. Release and pull out the filter.
3. Disassemble the fine filter pulling it from the coarse filter, clean the components, reassemble and reposition.

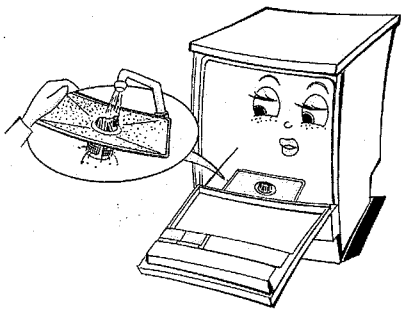

CLEANING THE SPRAY ARMS

Should the spray arms be blocked by food leftovers, remove them as follows:

1. Unscrew the securing wing-nuts.
2. Remove the spray arms.
3. Clean them under running water.
4. Remount the spray arms tightening the nuts.

Note: Do not interchange the upper and lower spray arms. **The spray jets must point upwards.**

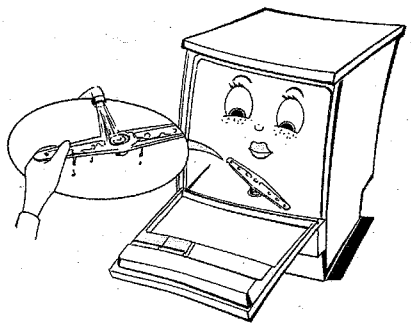

AFTER SALE SERVICE

Before calling for service:

1. check the trouble-shooting guide carefully to see if you can correct the fault yourself;
2. re-run the programme to check if the fault has cleared itself.
   If both attempts fail, please call for Service.
   Describe the fault and give the model N° and Service N° of your appliance, your address and phone N°.

CONNECTIONS

ELECTRICAL CONNECTION

- This appliance conforms to EEC directive 87/308 on radiointerference.
- Please follow the particular regulations of the local electricity board.
- Make sure that the voltage stated on the rating plate corresponds to the voltage in your home.
- In case of faults, disconnect the plug or switch off electricity at the mains.
- The power supply can only be replaced by a qualified technician.

WATER INLET AND OUTLET

- Follow the particular regulations of the local water board.
- Ensure that the inlet and drain hoses are kink-free.
- If the length of the hoses does not suffice, replace them with similar ones (from your Dealer or Service).
- Clamp the drain hose to the sink to prevent it from falling-off.
- The dishwasher cannot suck water back. There is no need to use connecting fittings with a non-return valve.

Standard water inlet hose

- For cold water inlet (up to 25°C), use the inlet hose with the blue marking (if provided).
- For hot water inlet (up to 60°C), use the inlet hose with the red marking (if provided).

Water stop (if provided)

The 7-fold water security system protects your home against water damage. In the event of a leak in the inlet hose or within the machine itself, the system shuts off the water supply completely.

INFORMATION FOR TEST LABORATORIES

Capacity

12 international place settings including serving dishes according to DIN 44990 - IEC 436.
Test programme: Normal programme (65°C).
Detergent: 7,5 g for prewash;
17,5 g for main wash.

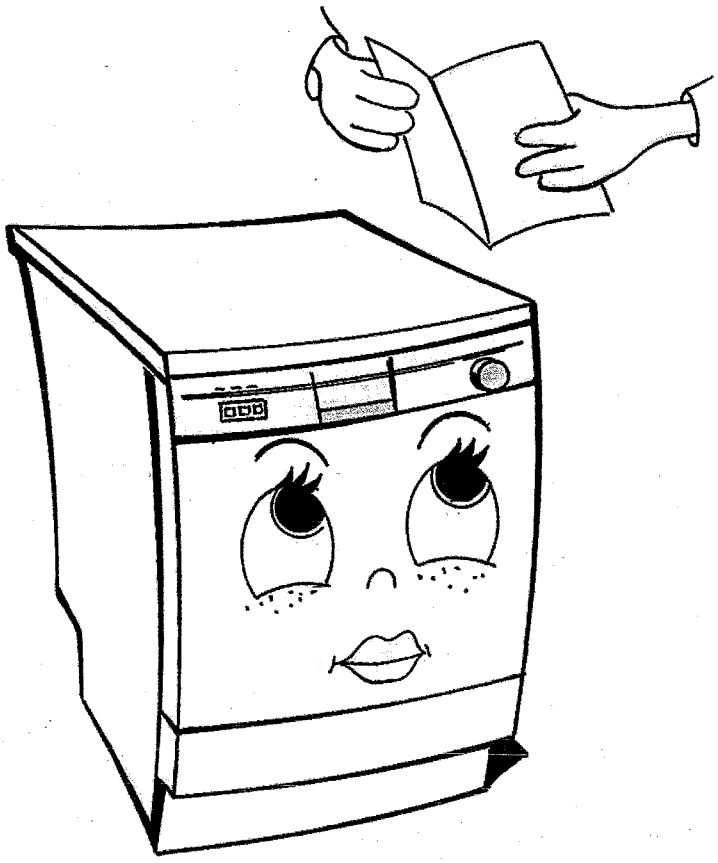

GUIDE D'EMPLOI RAPIDE

POUR EMPLOYER LA MACHINE LA PREMIERE FOIS:

1. Vérifier la dureté de l'eau et remplir le réservoir à sel (sur le fond du lave-vaisselle).
2. Remplir le distributeur du liquide de rinçage (distributeur à droite de la contre-porte).

POUR L'USAGE QUOTIDIEN:

1. Charger la vaisselle dans les deux paniers.
2. Remplir le distributeur de détergent (distributeur à gauche de la contre-porte).
3. De temps en temps vérifier le niveau du liquide de rinçage et du sel.
4. Sélectionner le programme désiré (voir table page 35).
5. Appuyer sur la touche **MARCHE.**

Pour obtenir entière satisfaction de votre machine, nous vous recommandons de lire attentivement le mode d'emploi.